


HUAYU® K-1036E+L

User's instruction for all-purpose air conditioner remote controller

Product Introduction

K-1036E+L type universal air conditioner remote control can remotely control most brands and models of air conditioners with digital automatic code searching function with low power consumption , complete function ,far sending distance ,easy setting ,simple operation,original appearance ,comfortable handle and convenient use ,it applies big LCD display with clear settings ,built-in clock and timing ON/OFF function also make operation more convenient.

Panel Description:

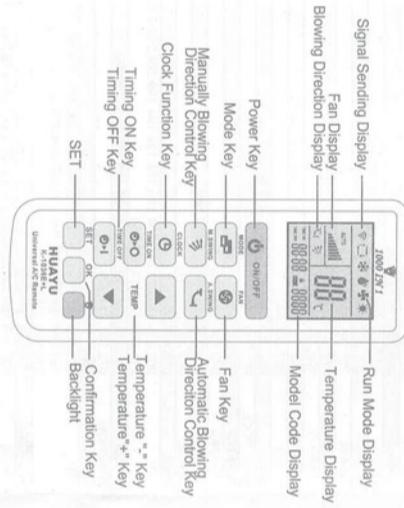


HUAYU® Модель: K-1036E+L

С помощью универсального пульта управления воздушным кондиционером K-1036E+L можно осуществлять управление воздушными кондиционерами таких брендов как: SAMSUNG, LG, HITACHI, PANASONIC, SANYO, CHIGO, DAIKIN, FUITSU-SUARE, HAIER, GREE, MITSUBISHI, SHARP, KONKA, TOSHIBA, MIDEA, HISENSE, AIRCO, RICOH и т.д.
Руководство пользователя описывает способы управления путем пульта дистанционного управления воздушным кондиционером.

Информация о продукте

С помощью универсального пульта управления воздушным кондиционером K-1036E+L можно осуществлять управление воздушными кондиционерами таких брендов как: SAMSUNG, LG, HITACHI, PANASONIC, SANYO, CHIGO, DAIKIN, FUITSU-SUARE, HAIER, GREE, MITSUBISHI, SHARP, KONKA, TOSHIBA, MIDEA, HISENSE, AIRCO, RICOH и т.д.
Руководство пользователя с пояснениями дополнительной настройки, встроенным таймером, что значительно повышает удобство эксплуатации.

Описание панели:

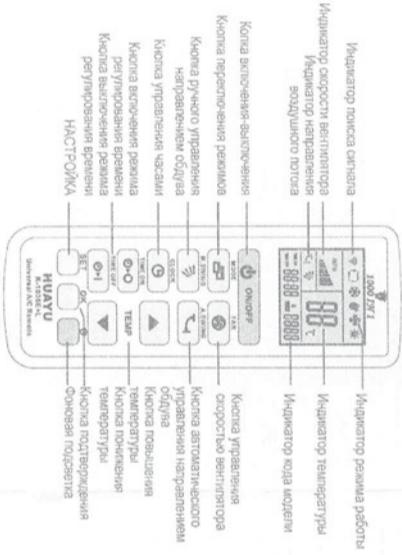

| Setting of Remote Control | |
|---|---|
| A The brand corresponding point-to-point fast searching | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Install the battery cover . The timer will appear in the left corner of LCD display. |
| B The brand corresponding point-to-point fast searching | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press the code key that corresponds to our brand and hold until the air conditioner is start to give signal, if a sound effect, the key and the setting is completed. |

| Table of brand corresponding keys | |
|-----------------------------------|-----------------|
| ON/OFF | TEMP▲ TEMP▼ FAN |

| Setting of Remote Control | |
|---------------------------|--|
| A | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press the code key that corresponds to our brand and hold until the air conditioner is start to give signal, if a sound effect, the key and the setting is completed. |
| B | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press "OK" button and the selected conditioner type code will stop flickering. |
| C | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Hold "SET" button (for about 3 seconds) until the conditioner type code flickers in the window, press temperature "+" or "-" buttons until the selected code flickers in the window. When the code is right, the air conditioner will start. |
| D | 1 Manually plug-in the air conditioner, find the type of the air conditioner, find the code table*, and find the first code, for example: Haier |

| Setting of Remote Control | |
|---------------------------|--|
| A | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press the code key that corresponds to our brand and hold until the air conditioner is start to give signal, if a sound effect, the key and the setting is completed. |
| B | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press "OK" button and the selected conditioner type code will stop flickering. |
| C | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Hold "SET" button (for about 3 seconds) until the conditioner type code flickers in the window, press temperature "+" or "-" buttons until the selected code flickers in the window. When the code is right, the air conditioner will start. |
| D | 1 Manually plug-in the air conditioner, find the type of the air conditioner, find the code table*, and find the first code, for example: Haier |

| Setting of Remote Control | |
|---------------------------|--|
| A | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press the code key that corresponds to our brand and hold until the air conditioner is start to give signal, if a sound effect, the key and the setting is completed. |
| B | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press "OK" button and the selected conditioner type code will stop flickering. |
| C | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Hold "SET" button (for about 3 seconds) until the conditioner type code flickers in the window, press temperature "+" or "-" buttons until the selected code flickers in the window. When the code is right, the air conditioner will start. |
| D | 1 Manually plug-in the air conditioner, find the type of the air conditioner, find the code table*, and find the first code, for example: Haier |

| Setting of Remote Control | |
|---------------------------|--|
| A | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press the code key that corresponds to our brand and hold until the air conditioner is start to give signal, if a sound effect, the key and the setting is completed. |
| B | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Press "OK" button and the selected conditioner type code will stop flickering. |
| C | 1 Manually plug-in the air conditioner, aim the remote control at the receiving window 2 Hold "SET" button (for about 3 seconds) until the conditioner type code flickers in the window, press temperature "+" or "-" buttons until the selected code flickers in the window. When the code is right, the air conditioner will start. |
| D | 1 Manually plug-in the air conditioner, find the type of the air conditioner, find the code table*, and find the first code, for example: Haier |